### What's in the Box

Please make sure to read the enclosed Use and Care Guide prior to using your unit.



# **Cleaning & Care**



HAND-WASH ONLY. Hand-wash your Ninja knives to maintain optimal performance.



Dry knives thoroughly before storing to prevent watermarks and spotting. **DO NOT** touch sharp edge of knife.



**DO NOT** place knives in dishwasher. Dishwashers can reduce performance and longevity of your knives and damage the handles and blades.



Wipe knife block to clean with a damp, not wet, dish towel or paper towel.

© 2024 SharkNinia Operating LLC, NINJA NEVERDULL is a trademark of SharkNinia Operating LLC.

K12012C PKG INSRT QSG E MP Mv2



pieces for cleaning. Fully open Shears with blades pointing away from you, then pull the piece with the hole off the bolt.



For best results, clean stone sharpening wheel every 6 months with running water and a soft bristle brush. Replace every 2 years.



# Quick Start Guide

# **Sharpening Guide**

**IMPORTANT:** Knives arrive sharp. **DO NOT** sharpen immediately. **DO NOT** attempt to sharpen wet or unclean knives. To maintain optimal sharpness, follow the sharpening steps **at least every 2 weeks.** 

#### TO SHARPEN:

- 1. Slide the lever to the bottom of the knife block.
- **2.** Insert a clean Ninja knife into the designated sharpening slot until the blade comes to a hard stop.





LARGE HANDLE Insert into upper sharpening slot (Chef and Santoku Knives)

**SMALL HANDLE** Insert into lower sharpening slot (Utility, Steak, and Paring)

 While lightly holding the inserted knife, <u>slide the lever all the way up and down 10</u> <u>times.</u> A slight click will be heard when the lever travels all the way to the top and bottom of the block.

**NOTE:** The lever must travel the full length of the block to sharpen, regardless of knife size, as shown here. The upstroke positions the stone sharpening wheel and the downstroke sharpens the knife.



- Ensure the lever is at the bottom of the block. <u>Push down and hold the release</u> <u>button</u> while carefully removing the knife.
- **5.** Rinse and dry knife thoroughly after sharpening to remove metal shavings. If knife has not been returned to preferred sharpness, repeat steps above.




qr.ninjakitchen.com/ neverdull-ca



## **Sharpener Tips & Tricks**

#### **Recommended Knife Usage**

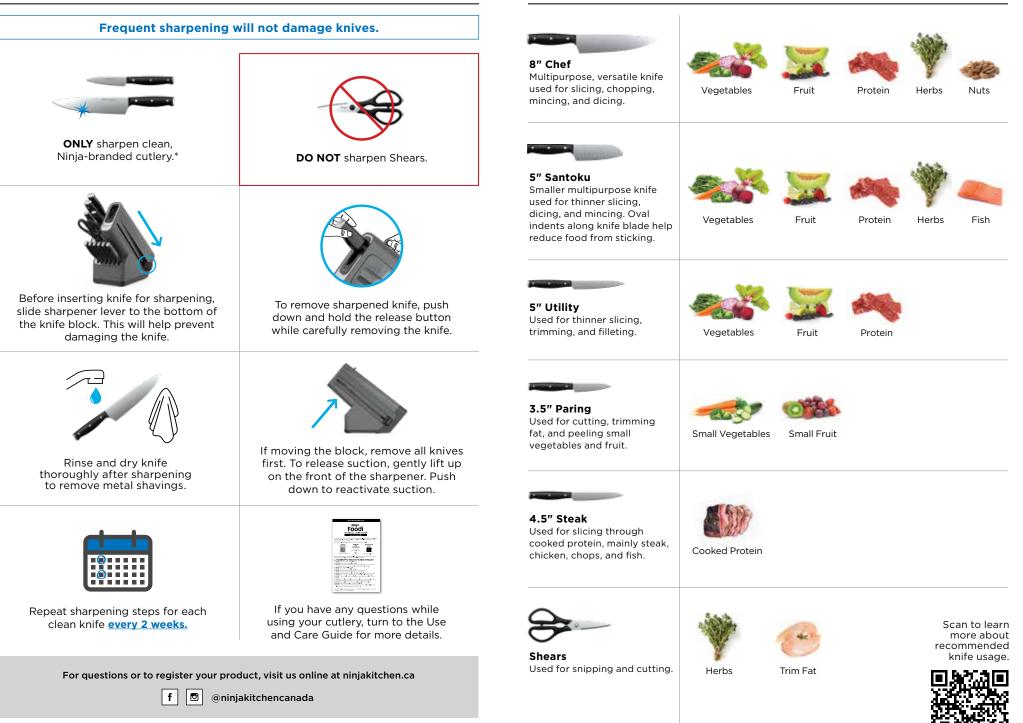

\*NeverDull In-Block Sharpener designed for Ninja knives only. Using other branded knives could damage both your sharpener and knives.