

Please make sure to read the enclosed Ninja® Owner's Guide prior to using your unit.

NINJA®

KITCHEN SYSTEM QUICK ASSEMBLY

NUTRI NINJA® CUPS



1. Screw on the blade assembly clockwise until you have a tight seal.



2. Turn cup upside down and lower it onto the base.



3. Turn cup clockwise to lock in place.

 


WARNING: Handle the Nutri Ninja Blade Assembly with care, as the blades are sharp.

PITCHER



1. Place pitcher on base and turn clockwise to lock in place.



2. Holding the blade assembly by the top of the shaft, insert it into the pitcher.



3. Align arrows on lid and handle, then lower handle to lock in place.

FOOD PROCESSOR BOWL



1. Place bowl on base and turn clockwise to lock in place.



2. Holding the desired blade assembly by the top of the shaft, insert it into the bowl.



3. Align arrows on lid and handle, then lower handle to lock in place.



WARNING: Blade Assemblies are sharp and not locked in place. Make sure lid is locked onto the pitcher or bowl before pouring. If pouring without lid, carefully remove Blade Assembly first. Failure to do so will result in a risk of laceration. Refer to the Ninja Owner's Guide for additional information.

QUESTIONS? We're here to help. Call 1-877-646-5288 or visit ninjakitchen.com

Please make sure to read the enclosed Ninja® Owner's Guide prior to using your unit.

NINJA®

KITCHEN SYSTEM

QUICK TIPS

NUTRI NINJA® CUPS


Best for: Personal-sized smoothies, greens, and seeds



Start by pressing the Single Serve button 3 to 4 times to break down tough ingredients. Then blend to desired consistency.

PITCHER

Best for: Large batches of milkshakes and frozen drinks

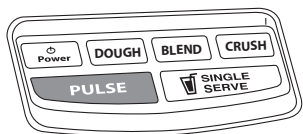

! Start by pressing the Pulse button 3 to 4 times to break down tough ingredients. Then blend to desired consistency.

FOOD PROCESSOR BOWL

Best for: Dips, sauces, dough making, and meal prep



! **Chopping:** Use short pulses for even processing and to avoid over-processing.

Dough Making: Use only the DOUGH setting.



WARNING: Blade Assemblies are sharp and not locked in place. Make sure lid is locked onto the pitcher or bowl before pouring. If pouring without lid, carefully remove Blade Assembly first. Failure to do so will result in a risk of laceration. Refer to the Ninja Owner's Guide for additional information.

CLEANING

Dishwasher: The containers, lids, and blade assemblies are all dishwasher safe. The lids and blade assemblies are top-rack dishwasher safe. Ensure the blade assemblies are removed from the containers before placing in the dishwasher.

Hand washing: Wash the containers, lids, and blade assemblies in warm, soapy water. When washing the blade assemblies, use a dishwashing utensil with a handle to avoid direct hand contact with blades. Handle blade assemblies with care to avoid contact with sharp edges. Rinse and air-dry thoroughly.



WARNING: Handle the blade assemblies with care when washing, as the blades are sharp. Contact with the blades' edges can result in laceration.

QUESTIONS? We're here to help. Call **1-877-646-5288** or visit ninjakitchen.com