

Please make sure to read the enclosed Ninja® Owner's Guide prior to using your unit.

NUTRI NINJA



PRO COMPACT BLENDER QUICK ASSEMBLY

NUTRI NINJA® CUPS



1. Screw on the blade assembly clockwise until you have a tight seal.




2. Turn the cup upside down and lower it onto the base.




3. Turn the cup clockwise to lock into place.

! WARNING: Handle the Pro Extractor Blades Assembly with care, as the blades are sharp.

BLENDER PITCHER

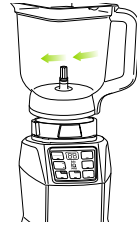

1. Place the Blender Pitcher on the base and turn clockwise to lock in place.

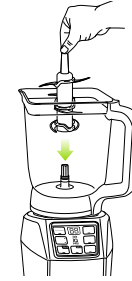

2. Holding the blade assembly by the top of the shaft, insert it into the pitcher.



3. Align the arrows on the lid and handle, then lower handle to lock in place.

! WARNING: Stacked Blade Assembly is sharp and not locked in place. Make sure lid is locked onto the pitcher before pouring. If pouring without lid, carefully remove Stacked Blade Assembly first. When handling the Stacked Blade Assembly, always hold it by the shaft. Failure to do so will result in a risk of laceration. Refer to the Ninja Owner's Guide for additional information.

QUESTIONS? We're here to help. Call 1-877-646-5288 or visit www.ninjakitchen.com

BL490C

Veuillez lire le manuel du propriétaire Ninja™ ci-joint avant d'utiliser votre appareil.

MÉLANGEUR PRO COMPACT ASSEMBLAGE RAPIDE



NUTRI NINJA

1. Vissez le jeu de lames dans le sens des aiguilles d'une montre jusqu'à ce que l'assemblage soit étanche.



2. Retournez le gobelet et placez-le à l'envers sur le bloc-moteur.



3. Tournez le gobelet dans le sens des aiguilles d'une montre pour le verrouiller.




PICHET MÉLANGEUR


1. Placez le pichet sur le bloc-moteur, puis tournez le bol dans le sens des aiguilles d'une montre afin de le verrouiller.



2. En tenant la partie supérieure de l'arbre du jeu de lames, insérez celui-ci dans le pichet.

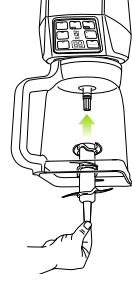

3. Alignez les flèches du couvercle et de la poignée, puis enfoncez celle-ci afin de la verrouiller.

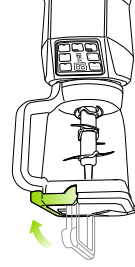

! WARNING: Le jeu de lames superposées est coupante et n'est pas verrouillée en place. Vérifiez que le couvercle est fixé au récipient avant de verser. Pour verser sans le couvercle, retirez d'abord le jeu de lames en tenant la partie supérieure de l'arbre afin d'éviter tout risque de laceration. Consultez le guide d'utilisateur Ninja pour plus d'informations.

DES QUESTIONS? Nous sommes là pour vous aider. Appelez au 1-877-646-5288 ou visitez le site Web www.ninjakitchen.com

BL490C

Veuillez lire le manuel du propriétaire Ninja™ ci-joint avant d'utiliser votre appareil.



MÉLANGEUR PRO COMPACT ASSEMBLAGE RAPIDE

Grâce aux réglages intelligents comportant des séquences de mélange variables, vous obtenez des préparations homogènes, uniformes et de qualité professionnelle lors de chaque utilisation... fini les devinettes!



FONCTION AUTO-iQ SMOOTH BOOST™ MC

Le bouton « Auto-iQ Smooth Boost » commande le degré d'homogénéité de tous les types de boisson.

EXTRAIRE

Pour préparer des jus nutritifs* à boire, assurez-vous de sélectionner « OUI », puis appuyez sur le bouton « EXTRAIRE ».

MÉLANGER

Pour mélanger des boissons et des frappés homogènes et parfaits, assurez-vous de sélectionner « OUI », puis appuyez sur le bouton « MÉLANGER ».

CONSEIL

Si vous souhaitez déguster une boisson moins homogène et plus consistante, sélectionnez « NON ».



AUTO-iQ EXTRAIRE

• **Fonction idéale pour :** les légumes verts feuillus, les fruits et les légumes fibreux, les graines et les glaçons.

• La fonction d'extraction des nutriments* Auto-iQ est conçue spécialement pour vos gobelets Nutri Ninja.

* Extrait les vitamines et les nutriments des fruits et des légumes lors de la préparation des boissons nutritives.

CLEANING



AVERTISSEMENT : Manipulez les jeux de lames avec soin lorsque vous les nettoyez, car les lames sont tranchantes. Tout contact avec les arêtes des lames peut entraîner des lacerations.

Lave-vaisselle : Les couvercles, les gobelets et le jeu de lames peut être mis au lave-vaisselle. Retirez le jeu de lames du gobelet avant de le mettre au lave-vaisselle.

Nettoyage à la main : Lavez les couvercles, les gobelets et le jeu de lames à l'eau savonneuse tiède. Lavez le jeu de lames avec une brosse à vaisselle munie d'une poignée pour éviter tout contact direct avec les lames. Manipulez le jeu de lames avec précaution pour éviter de toucher les bords coupants. Rincez et faites bien sécher à l'air.

DES QUESTIONS? Nous sommes là pour vous aider. Appelez au 1-877-646-5288 ou visitez le site Web www.ninjakitchen.com

Please make sure to read the enclosed Ninja® Owner's Guide prior to using your unit.



PRO COMPACT BLENDER QUICK TIPS

Thanks to smart settings with unique variable blending patterns, you can expect smooth, consistent, professional-quality results every time—no guesswork required.



AUTO-iQ™ SMOOTH BOOST™

The Auto-iQ Smooth Boost button controls the level of smoothness for all types of drinks.

EXTRACT

For deliciously drinkable nutrient juices*, ensure **SMOOTH BOOST** “YES” is selected, then press **EXTRACT**.

*Extract a nutritious drink containing vitamins and nutrients from fruits and vegetables.

BLEND

To whip up perfect, smooth drinks and smoothies, ensure **SMOOTH BOOST** “YES” is selected, then press **BLEND**.

TIP

If you'd like your drink to have more texture and fullness, press **SMOOTH BOOST** “NO”.



AUTO-iQ EXTRAIRE

- **Great for:** Leafy greens, fibrous fruits and vegetables, seeds, and ice.
- Auto-iQ Nutrient Extraction* is specially designed to work only with your Nutri Ninja Cups.

*Extract a nutritious drink containing vitamins and nutrients from fruits and vegetables.



AUTO-iQ BLEND

- **Great for:** Milkshakes, frozen drinks, smoothies, and sauces.
- Use the Auto-iQ Blend setting with your Blend & Prep Bowl.
- This setting will also work with your Nutri Ninja Cup.

CLEANING

Hand washing: Wash containers, lids, and blade assemblies in warm, soapy water. When washing the blade assemblies, use a dishwashing utensil with a handle to avoid direct hand contact with blades. Handle blade assemblies with care to avoid contact with sharp edges. Rinse and air-dry thoroughly.

Dishwasher: The containers, lids, blade assemblies and attachments are all dishwasher safe. The lids and blade assemblies are top rack dishwasher safe. Ensure that the blade assemblies are removed from the containers before placing in the dishwasher.

WARNING: Handle the blade assemblies with care when washing, as the blades are sharp. Contact with the blades' edges can result in laceration.

QUESTIONS? We're here to help. Call 1-877-646-5288 or visit www.ninjakitchen.com

BL490C